

PHILIPS

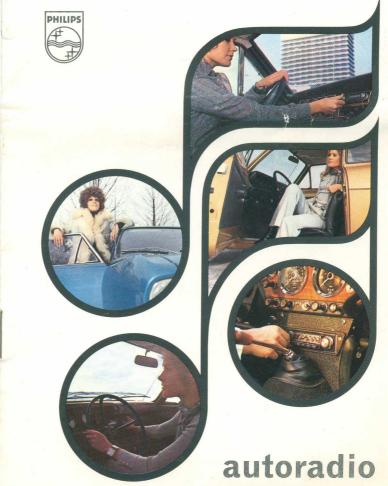

22 RN 314

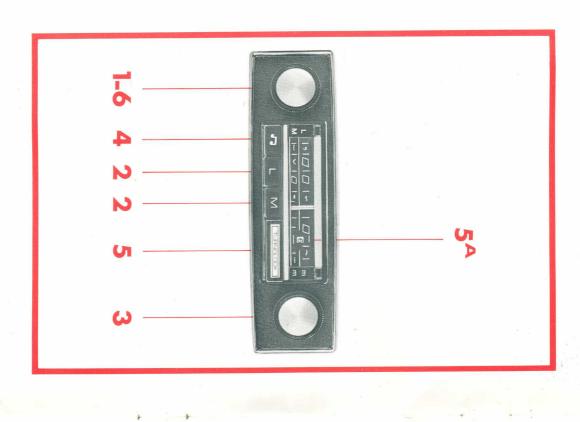

OPERATION

Operate the set in accordance with the indications in the figure:
1. Switching on and controlling the volume - 2. Selecting the wave range - 3. Tuning - 4. Controlling the tone colour - 5 Automatic tuning - 5a. Numerical indicator for automatic tuning - 6. Switching off.

RECEIVING SIX STATIONS WITHOUT TUNING IN

the name of this ingenious preselection system. Six different stations, distributed to your own preference over both wave ranges of the set, can be received by merely depressing this pushbutton. The word "TURNOLOCK" on the right button of your set is

For tuning, proceed as follows:

Switch on the set and select the wave range.
Depress the "turnolock" pushbutton (5) repeatedly until figure 2 is visible on the indicator (5a).
Tune accurately to your favourite station.
Every time when, after the "turnolock" has been depressed in the relevant wave range, figure 2 appears on the indi-

cator, the same station is received. If this station is to remain coupled to figure 2, do not turn tuning knob (3) while this figure is visible.

One of the indicator positions can be used for manual tuning in both wave ranges. For this purpose, figure 1 on the indicator has been replaced by a red mark. If manual tuning is carried out only when the red mark is visible, you can be sure of a perfect preselection of five favourite stations coupled to position (red mark), the last station tuned in the figures shown on the indicator. Also in the manual tuning position (red mark), the last station tuned in will again be received.

SOUND-REPRODUCING EQUIPMENT

For reproduction of records or tapes, the Auto-Mignon, Cassette Player or the Cassette Recorder (in a special mounting-unit) can be connected. Ask your dealer. the