



Lotus Europa S1 Parts Manual - Section E19 - Engine - Fuel Pump - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46E6313	46E6313	1	1									Fuel Pump	
46E6314	46E6314	1	1									Fuel Pump Repair Kit (697-04)	
46E6315	46E6315	1	1									Diaphragm (697-04)	
46E6316	46E6316	1	1									Spring - diaphragm (697-04)	
46E6317	46E6317	1	1									Washer - diaphragm spring (697-04)	
46E6318	46E6318	1	1									Washer - diaphragm spring seat (697-04)	
46E6319	46E6319	1	1									Lever Assembly - with spring (697-04)	
46E6320	46E6320	1	1									Housing - lower (697-04)	
46E6321	46E6321	1	1									Spring - Lever Assembly	
46E6322	46E6322	1	1									Screw - filter cover	
46E6323	46E6323	1	1									Clamp - filter cover	
46E6324	46E6324	1	1									Cover	
46E6325	46E6325	1	1									Fuel Pump Gasket - filter bowl	
46E6326	46E6326	1	1									Spring - fuel filter	
46E6327	46E6327	1	1									Filter	
46E6328	46E6328	8	8									Screw - upper housing to lower housing	
46E6329	46E6329	1	1									Housing - upper (697-04)	
46E6330	46E6330	1	1									Screw - lever to housing	
46E6331	46E6331	1	1									Fuel Pump Gasket - housing to valve assembly	
46E6332	46E6332	1	1									Valve Assembly	
46E6333	46E6333	2	2									Screw - Valve Assembly to Upper Housing	