



Lotus Europa S1 Parts Manual - Section F2 - Transmission - Casing - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46F6001	46F6001	2	2									Nut - Bearing Retaining	
46F6002	46F6002	2	2									Plug - Oil Drain/Oil Level	
46F6003	46F6003	2	2									Spacer	
46F6004	46F6004	2	2									Dowel Pin	
46F6005	46F6005	1	1									Breather	
46F6006	46F6006	2	2									Bush (697-04)	
8023060259	8023060259	1	1									Bolt	
1081110769	1081110769	1	1									Washer	
8080100649	8080100649	1	1									Nut	
1081300752	1081300752	8	8									Washer	
46F6007	46F6007	3	3									Bolt 7 x 50	
46F6019	46F6019	2	2									Bolt - Bearing Retaining Nut	
46F6010	46F6010	2	2									Bolt 7 x 40	
8080100759	8080100759	15	15									Nut	
46F6011	46F6011	30	30									Washer	
46F6012	46F6012	1	1									Bolt	
46F6013	46F6013	1	1									Helicoil	
46F6177	46F6177	1	1									Transmission Gasket Set	
46F6014	46F6014	1	1									Gearbox Casing (697-04)	Replaced by 046F6014A
46F6015	46F6015	2	2									Lock Tab - Bearing Retaining Nut	
1081350832	1081350832	2	2									Washer - Bearing Retaining Nut	
8023080159	8023080159	2	2									Bolt - Bearing Retaining Nut	
8080100859	8080100859	2	2									Nut	
46F6017	46F6017	4	4									Washer	
46F6018	46F6018	2	2									Bolt - 8 x 112	
46F6019	46F6019	13	13									Bolt - 7 x 30	