



Lotus Europa S1 Parts Manual - Section K1 - Cooling - Radiator and Fan - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46K012	46K012	1	1									Radiator Hose - Transfer Pipe to Engine	
46K6006	46K6006	10	10									Hose Clip - Hose Clamp	
XUFS0412	XUFS0412	2	2									Screw - Transfer Pipe to Chassis and Radiator Top To Body	
A04W0905	A04W0905	1	1									Washer - Transfer Pipe to Chassis	1/32" thick, 1/2" OD, 1/4" ID
LUFN040F	LUFN040F	1	1									Nut - Transfer Pipe to Chassis	5/16" x 24 TPI, 1/2" head
46K001A	46K001A	1	1									Radiator Screen	
46K001	46K001	1	1									Radiator	
46M6121	46M6121	1	1									Radiator Fan Motor	
46M6123	46M6123	1	1									Radiator Fan	
46K6004	46K6004	1	1									Radiator Fan Housing	
A04W0905	A04W0905	1	1									Washer - Radiator Top to Body	1/32" thick, 1/2" OD, 1/4" ID
LUFN040F	LUFN040F	1	1									Nut - Radiator Top to Body	5/16" x 24 TPI, 1/2" head
A054K6001	A054K6001	1	1									Bleed Valve	
46K053	46K053	1	1									Transfer Pipe - Radiator to Engine	
46K003	46K003	2	2									Radiator Hose - Radiator to Transfer Pipe	
46K6002	46K6002	1	1									Thermal Switch (replaced by 046K6009)	
46K6003	46K6003	1	1									Thermal Switch Washer	
46K6007	46K6007	1	1									Hose Clip - Hose Clamp	
54K053	54K053	1	1									Transfer Pipe - Radiator to Engine	
46K052	46K052	1	1									Transfer Pipe - Swirl-pot to Radiator	
46K011	46K011	1	1									Radiator Hose - Engine to Swirl-pot	
46K0060	46K0060	1	1									Hose - Swirl Pot to Transfer Pipe	
46K6000	46K6000	1	1									Radiator Cap	
46K0066	46K0066	1	1									Tube - Overflow	
46K055	46K055	1	1									Swirl Pot	
J017	J017	1	1									Sleeve	