



Lotus Europa S1 Parts Manual - Section L1 - Fuel - Fuel Tank and Hoses - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46L6002	46L6002	1	1									Fuel Filler Cap	
46L705	46L705	1	1									Filler Neck	
46L6001	46L6001	1	1									Gromet - Filler Neck	
46L003	46L003	1	1									Hose - Filler Neck to Tank	
46L6003	46L6003	2	2									Clip - Filler Neck Hose	
46L014	46L014	1	1									Fuel Tank	
A0SW1601	A0SW1601	2	2									Washer - Fuel Tank Bottom to Body	
LUFN050F	LUFN050F	2	2									Nut - Fuel Tank Bottom to Body	5/16" x 24 TPI, 1/2" head
46L6004	46L6004	1	1									Fuel Level Transmitter Gasket	
46L6000	46L6000	1	1									Fuel Level Transmitter	
46L2001	46L2001	1	1									Hose - Tank Supply Port to Pump Input	
46E6343	46E6343	4	4									Sleeve	
46L2000	46L2000	1	1									Hose - Pump Return to Fuel Level Transmitter	