



Lotus Europa S1 Parts Manual - Section M1 - Electrical - Alternator - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
46M6007	46M6007	1	1									Bearing	
46M6017	46M6017	1	1									Front Housing	
46M6019	46M6019	1	1									Nut - Washer - Cup Washer and Woodruff Key	
46M6023	46M6023	1	1									Alternator Fan	
46M6025	46M6025	1	1									Pulley	
46M6011	46M6011	1	1									Rear Contact Plate	
46M6008	46M6008	1	1									Stator	
46M6018	46M6018	4	4									Bolt - Washer and Nut	
1081110559	1081110559	1	1									Washer	
46M6003	46M6003	1	1									Alternator Up to Engine No - 0389	Replaced by 046M6003 (697-04) with 1 of 046E6489 - 1 of A046M6099 - 1 of A046M6106 & 1 of A046M6108
46M6004	46M6004	1	1									Woodruff Key	
46M6006	46M6006	1	1									Bearing	
46M6005	46M6005	1	1									Rotor	
46M6016	46M6016	1	1									Bearing Retaining Plate and Screws	
46M6015	46M6015	1	1									Contact Cover and Screws	
46M6020	46M6020	1	1									Contacts and Bolts	
8070040080	8070040080	1	1									Contact Plate Screws	
46M6014	46M6014	1	1									Contact Plate and Screws	
8080100549	8080100549	1	1									Nut	
1081300552	1081300552	1	1									Washer	
46M6012	46M6012	1	1									Connector Cover	
8080100649	8080100649	1	1									Nut	
46M6013	46M6013	1	1									Washer	
46M6024	46M6024	1	1									O Ring and Rivets	
46M6009	46M6009	1	1									Diode Holding Plate	
46M6010	46M6010	1	1									Nuts - Washers and Spacers	
46M6114	46M6114	1	1									Diodes (-)	
46M6115	46M6115	1	1									Diodes (+)	