



JA

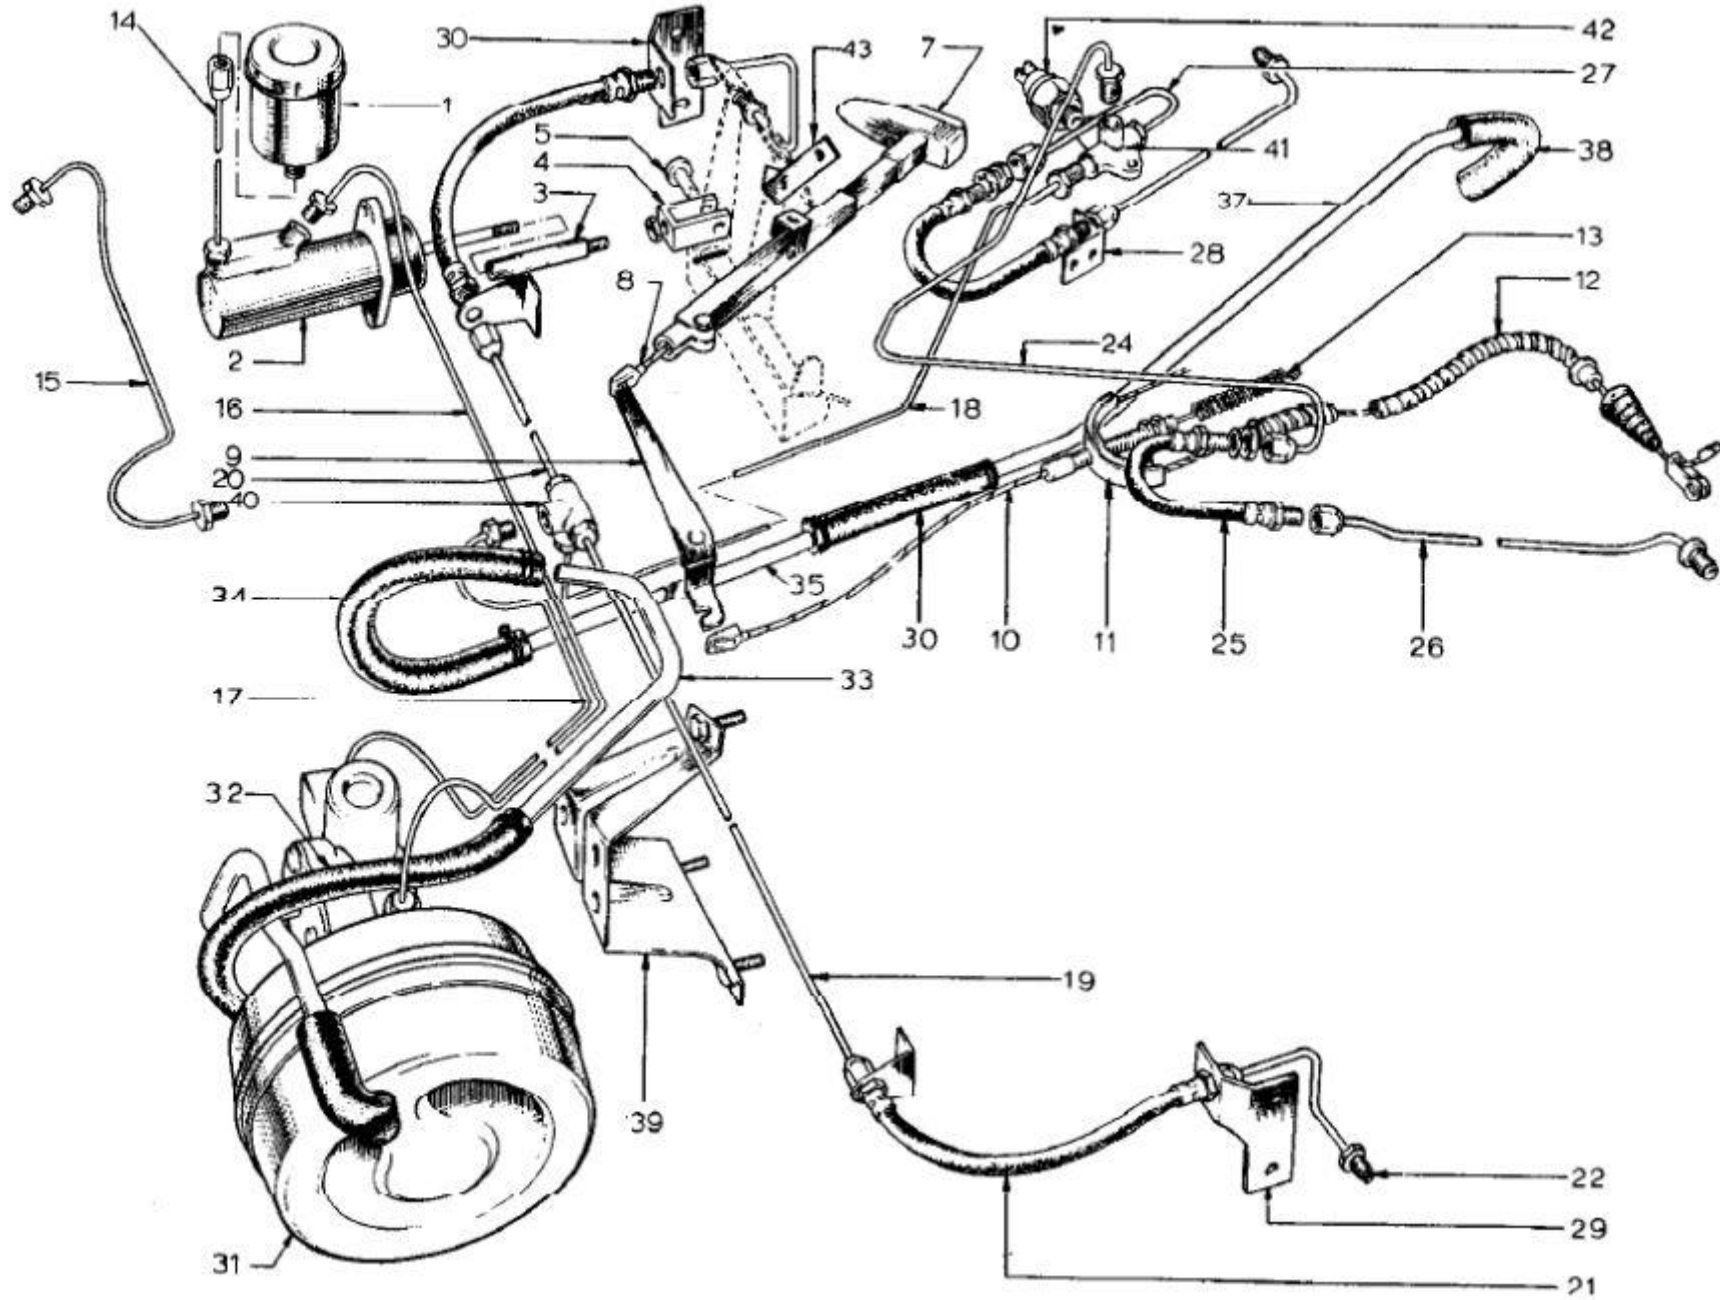

Lotus Europa S1/S2 Parts Manual - Section JA - Brakes - Servo Assisted - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
1	046J6019	1	1	1								Reservoir	
1	046J6041	1	1	1								Cap - Reservoir	
1	046J0078	1	1	1								Mounting Bracket - Reservoir	
2	046J6018	1	1	1								Master Cylinder	
2	046J6015	1	1	1								Repair Kit - Master Cylinder	
2	046J0075	1	1	1								Adaptor	
3	A046J0075											Replaced by 054J0075	
3	A054J0075			1								Adaptor	
4	046J0076	1	1	1	1							Clevis	
5	W0084	1	1	1	1							Clevis Pin - Clevis to Pedal	
5	415	1	1	1	1							Split Pin - Clevis to Pedal	
5	046J0727	1	1								+	Handbrake Lever Assembly	
7	A026J0704			1	1						+	Handbrake Lever Assembly	
7	A026J0705			1	1						+	Handbrake Lever Assembly	
8	046J0067	1	1	1	1							Handbrake Cable - Lever to Multiplier	
9	046J0058	1	1	1	1						+	Multiplier	
9	046J0057	1	1	1	1						+	Multiplier	
9	046J0074	1	1	1	1							Pivot Bolt - Multiplier to Chassis	
9	W0078	1	1	1	1							Washer - Multiplier to Chassis	
10	046J0068	1	1	1	1							Handbrake Cable - Intermediate	
11	046J6028	1	1	1	1							Compensator Assembly	
12	046J0069	1	1	1	1							Handbrake Cable - rear	
13	046J0016	1	1	1	1							Return Spring	
14	046J6032	1	1	1								Bundy Pipe - Reservoir to Master Cylinder	
15	046J6058			1							+	Bundy Pipe - Master Cylinder to Union	
15	054J6009			1							+	Bundy Pipe - Master Cylinder to Union	
16	046J6048		1	1							+	Bundy Pipe - Master Cylinder to Servo	
16	046J6047		1	1							+	Bundy Pipe - Master Cylinder to Servo	
17	054J6026			1								Bundy Pipe - Servo to Union	
18	046J6037	1	1									Bundy Pipe - Front Union to Rear Union	
18	054J6006			1	1							Bundy Pipe - Front Union to Rear Union	
19	046J6035	1	1	1								Bundy Pipe - Union to Flexible Hose LH	
20	046J6036	1	1	1								Bundy Pipe - Union to Flexible Hose RH	


JA

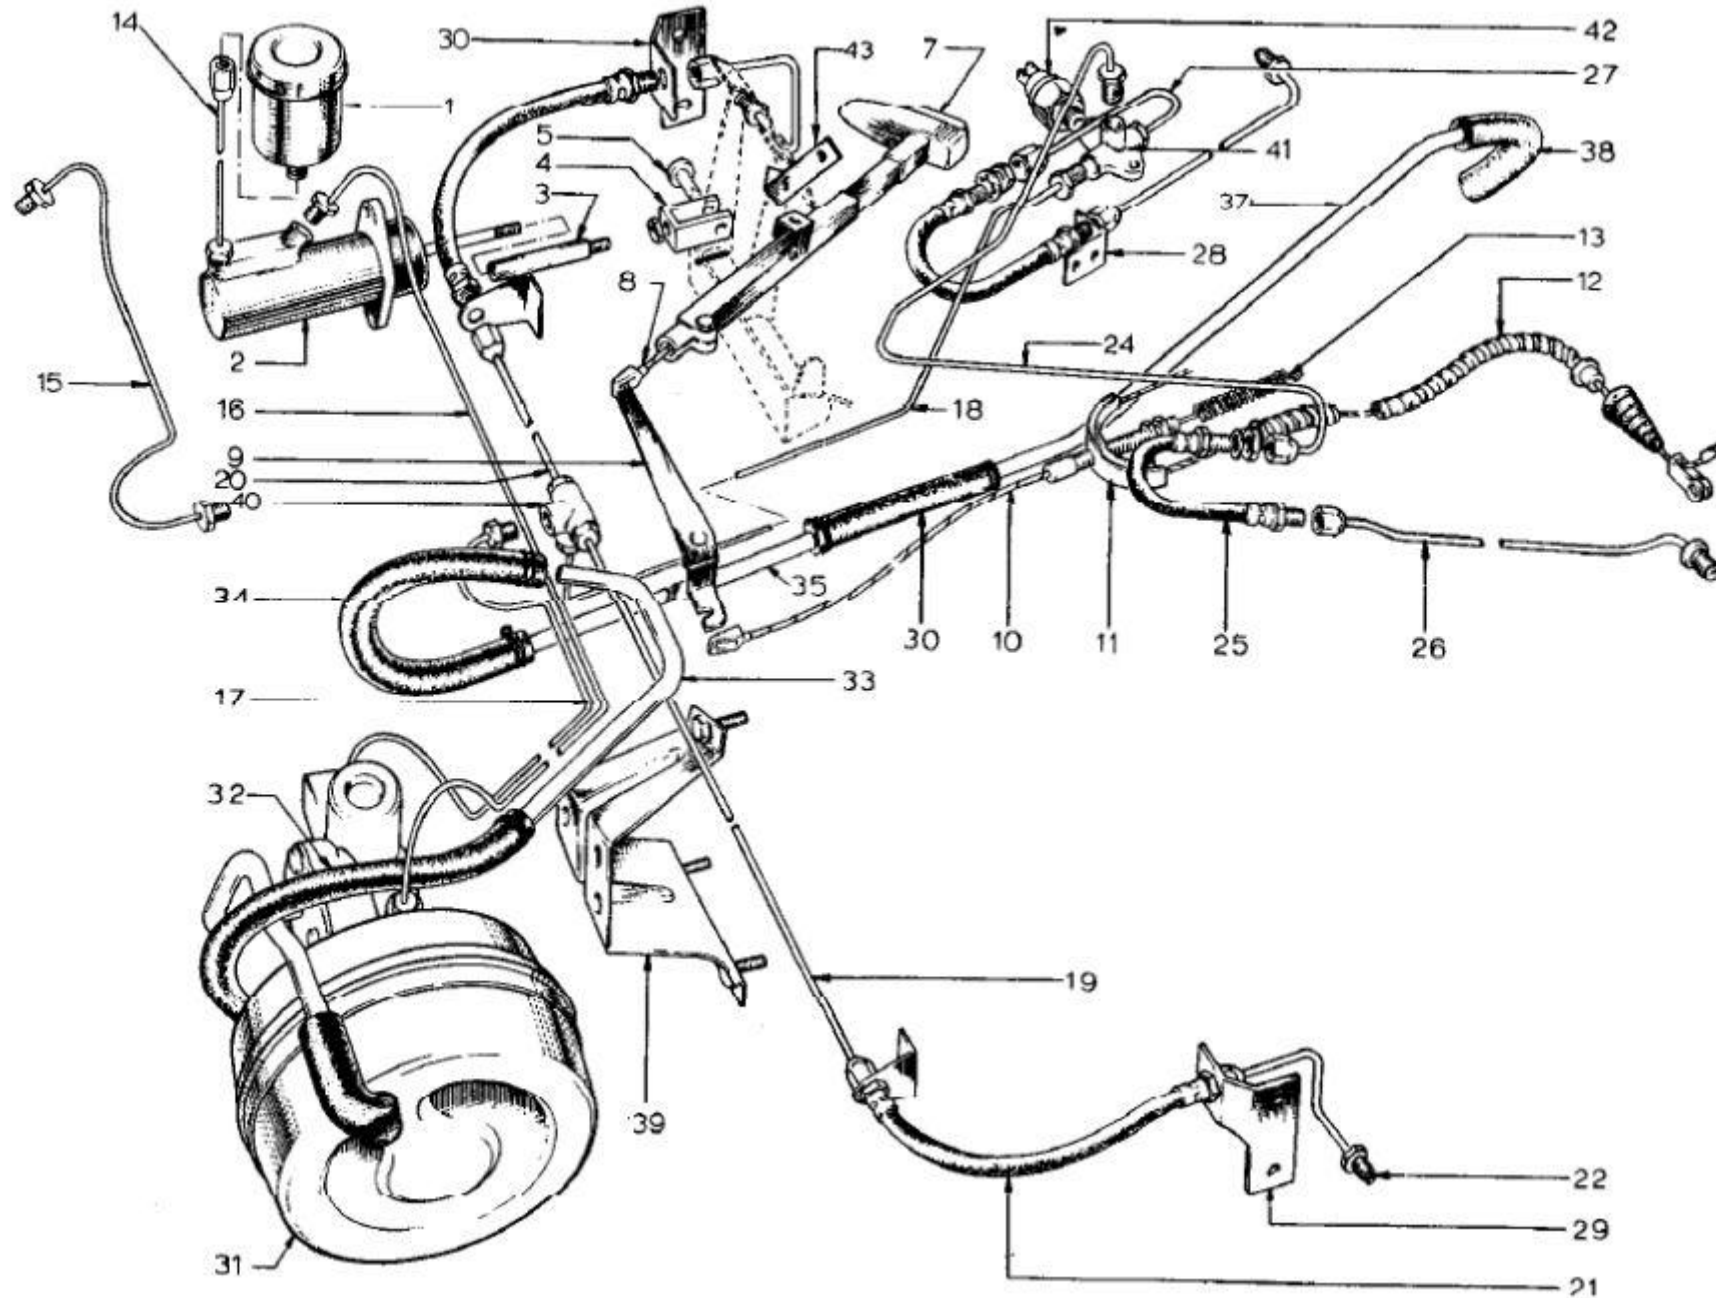

Lotus Europa S1/S2 Parts Manual - Section JA - Brakes - Servo Assisted - Page 4

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
21	046J6016	2	2	2	2							Flexible Hose - Front	
21	AUFN060H	2	2	2	2							Nut - Flexible Hose Retaining	
21	L06W0000	2	2	2	2							Washer - Flexible Hose Retaining	
22	046J6044	2	2	2	2							Bundy Pipe - Flexible Hose to Caliper	
24	046J6043	1	1	1	1							Bundy Pipe - Union to Flexible Hose Rear - LH	
25	046J6020	2	2	2	2							Flexible Hose - Rear	
25	AUFN060H	2	2	2	2							Nut - Flexible Hose Retaining	
25	L06W0000	2	2	2	2							Washer - Flexible Hose Retaining	
26	046J6042	2	2	2	2							Bundy Pipe - Flexible Hose to Rear Brake	
27	046J6045	1	1	1	1							Bundy Pipe - Union to Flexible Hose Rear - RH	
28	046J2002	2	2	2	2							Bracket	
29	046J2000	1	1	1	1							Bracket - LH	
30	046J2001	1	1	1	1							Bracket - RH	
31	046J6052		1									Servo Unit - Service Option	
31	054J6023			1								Servo Unit	
31	046J6055		1	1								Air Filter Element - Servo	
32	046J6053		1	1								Vacuum Hose	
33	046J6051		1	1								Pipe - Vacuum	
34	046J6057		1	1								Vacuum Hose	
35	046J6050		1	1								Pipe - Vacuum	
36	046J6027			1								Vacuum Hose	
37	046J6051		1	1								Pipe - Vacuum	
38	054J6025			1								Vacuum Hose	
38	046J0099												
39	036J6054		1	1								Mounting Bracket - Servo	Up to Chassis No. ?
30	A054J0164			1								Backing Plate	From Chassis No. ?
40	046J6017		1	1								Union - Front 4 way	Attaches with 7/16 head, 1/4" x 28 TPI, 1" long bolt, & 1/4" x 28 TPI Nyloc nut
41	046J6017		1	1								Union - Rear 4 way	Attaches with 7/16 head, 1/4" x 28 TPI, 1" long bolt, & 1/4" x 28 TPI Nyloc nut
42	046J6025	1	1	1	1							Stop Lamp Switch	
42	036J6059	1	1	1	1							Seal - Stop Lamp Switch	

JA

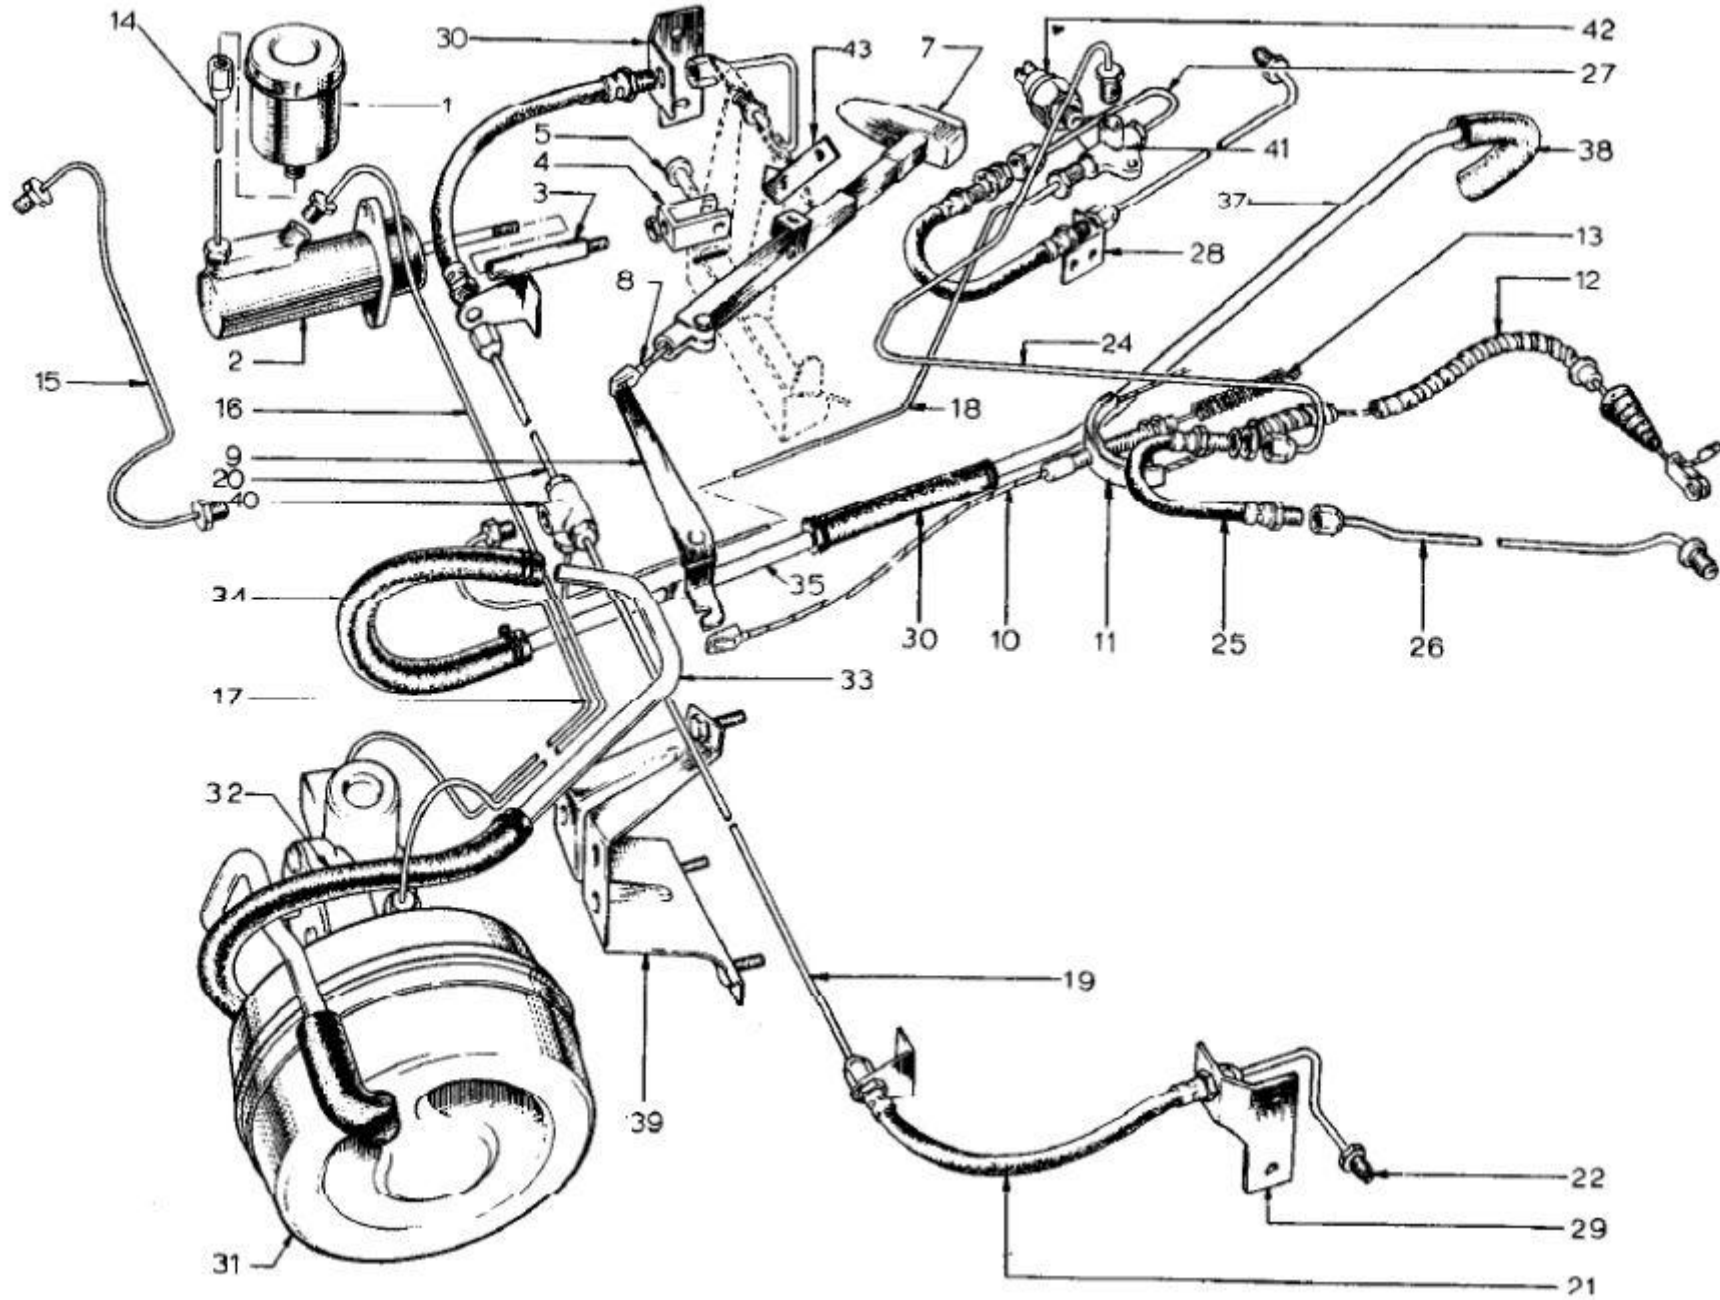

Lotus Europa S1/S2 Parts Manual - Section JA - Brakes - Servo Assisted - Page 6

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
43	054J0104	1	1	1	1					+		Support Bracket - Handbrake	
43	XUFS0508	2	2	2	2							Screw - Support Bracket to Body	
43	A05W1006	2	2	2	2							Washer - Support Bracket to Body	
43	YUFN050F	2	2	2	2							Nut - Support Bracket to Body	
43	XUFS0508	1	1	1	1							Screw - Handbrake Lever to Support Bracket	
43	YUFN	1	1	1	1							Nut - Handbrake Lever to Support Bracket	