



Lotus Europa TC/TCS Parts Manual - Section PA - Heater - Demisters and Fans - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
1	A050P0706W					1	1	1		+	+	Unit - Heater	
2	A074P6002Z								1			Unit - Heater	
3	X050P0057V					2	2	2	2			Hose - Heater to Chassis Transfer Pipe	
4	A046P6010V											Hose - Chassis Transfer Pipe to Main System (As Required)	
5	A046P6010V											Hose - Control Valve to Chassis Transfer Pipe (As Required)	
6	X036P6003Z					1	1	1	1			Heater Control Valve	
7	C074P0075Z					1	1	1	1			Heater Cable	
8	X036P0046Z					2	2	2	2			Hose - Heater to Demist L/H	
9	X050P6047Z					1	1	1	1			Demist Nozzle L/H	
10	X050P6048Z					1	1	1	1			Demist Nozzle R/H	
11	X046P6195Z					1		1		+	+	Motor - Heater	
12	W0050					3		3		+	+	Spacer	
13	Z054B1510Z					1		1	1	+	+	Grille	
14	X046P6006Z					2	2	2	2			Hose - Face Level Vent	
15	X054P0059Z					2	2	2	2			Connector - Inlet	
15	434					6	6	6	6			Rivet - Connector Securing - Connector - Inlet	
16	X046B6124Z					2	2	2	2			Face Level Vent	
17	X046M6205Z						1		1			Motor - Heater	
18	A074B2110Z						1		1			Bracket	
19	A074B2111Z						1		1			Bracket	
20	X026B0373Z						1		1			Seal	
21	A050P0049Z								1			Control - Heater	
22	A050P0050Z								2			Knob - Heater Control	
22	342								2			Screw - Knob Securing	
23	A074P0077Z								1			Heater Cable (long)	
24	A074P0076Z								1			Heater Cable Control (short)	