


LA

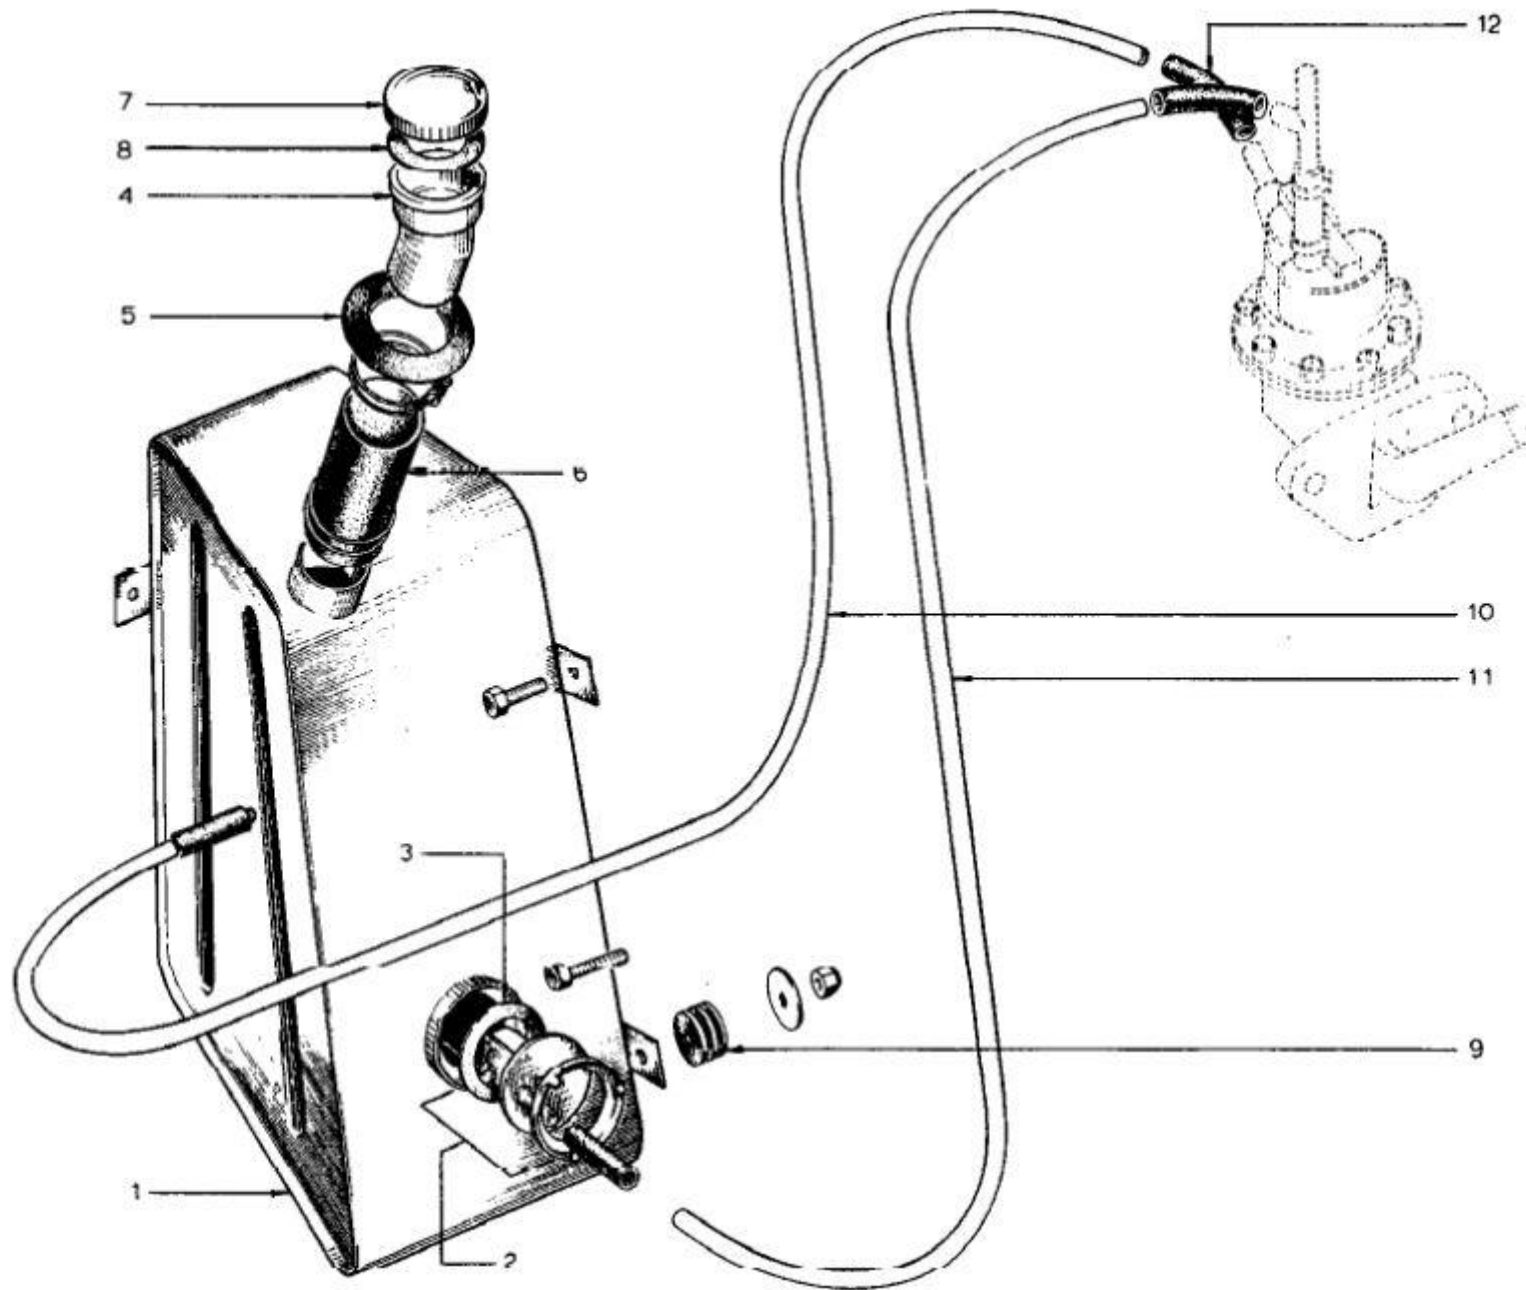

Lotus Europa S1/S2 Parts Manual - Section LA - Fuel - Fuel Tank and Hoses - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
1	046L0014	1	1									Fuel Tank	
1	054L0015			1	1							Fuel Tank	
2	046L6000	1	1									Fuel Level Transmitter	
2	046L6008			1	1							Fuel Level Transmitter	
3	046L6004	1	1	1	1							Fuel Level Transmitter Gasket	
4	046L0705	1	1									Filler Neck	
4	054L0705			1	1							Filler Neck	
5	046L6001	1	1	1	1							Gromet - Filler Neck	
6	046L0003	1	1	1	1							Hose - Filler Neck to Tank	
6	046L6003	2	2	2	2							Clip - Filler Neck Hose	
7	046L6002	1	1	1	1							Fuel Filler Cap	
8	046L6005	1	1	1	1							Seal Ring - Fuel Filler Cap	
8	054B6109											Replaced by A036L6019	
9	A03L6019			6	6							Rubber Washer - Fuel Tank Mounting	
9	YUFN050F	2	2									Nut - Fuel Tank Mounting	
9	A05W1606	2	2									Washer - Fuel Tank Mounting	3/32" thick, 7/8" OD, 13/32" ID
9	XUFS0310			1	1							Screw - Fuel Tank Mounting - Rear Lug	
9	A03W1606			1	1							Washer - Fuel Tank Mounting - Rear Lug	
9	YUFN030F			1	1							Nut - Fuel Tank Mounting - Rear Lug	
9	XUFS0316			2	2							Screw - Fuel Tank Mounting - top & Bottom Side Lugs	
9	A03W1606			1	1							Washer - Fuel Tank Mounting - top & Bottom Side Lugs	
9	YUFN030F			1	1							Nut - Fuel Tank Mounting - top & Bottom Side Lugs	
2	Part of 046L6000											Fuel Level Transmitter Clamp	