


JA

NOTE - BUNDY PIPES ARE USUALLY SUPPLIED IN STRAIGHT LENGTHS

J 31

Lotus Europa TC/TCS Parts Manual - Section JA - Brakes - Handbrake and Single System - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
1	X046J6019W					1		1		+	+	Reservoir	
1	X046J6041Z					1		1		+	+	Cap - Reservoir	
1	X046J0048Z					1		1		+	+	Bracket - mounting	
2	X046J6018W					1		1		+	+	Cylinder - Master	
2	X046J6015Z					1		1		+	+	Kit - Master Cylinder Servicing	
3	A074J0193Z					1		1		+	+	Adaptor - Push Rod	
4	X046J0076Z					1		1		+	+	Clevis - Push Rod	
5	W0084					1		1		+	+	Pin - Clevis	
5	W0086					1		1		+	+	Pin Split - Pin Clevis	
6	C036J0752W					1		1		+		Assembly - Handbrake R/H	
6	C036J0751W					1	1	1	1		+	Assembly - Handbrake L/H	
6	7					1	1	1	1			Screw - Handbrake to Bracket	
6	211					1	1	1	1			Nut - Handbrake to Bracket	
7	X054J0104Z					1		1		+		Bracket - Handbrake R/H	
7	X054J0103Z					1		1			+	Bracket - Handbrake L/H	
7	7					2	2	2	2			Screw - Bracket - Securing	
7	118					2	2	2	2			Washer - Bracket - Securing	
7	211					2	2	2	2			Nut - Bracket - Securing	
7	A074M6016Z						1	1				Microswitch - Handbrake	
8	A074J0747Z					1	1	1	1			Cable - Handbrake to Multiplying Lever	
9	A074J0750Z					1		1		+		Lever - Multiplying - R/H	
9	A074J0749Z					1	1	1	1		+	Lever - Multiplying - L/H	
9	A074J0748Z					1	1	1	1			Bolt - Pivot - Lever - Multiplying	
9	W0078					1	1	1	1			Washer - Lever - Multiplying	
10	B074J0194Z					1	1	1	1			Cable - Handbrake - Intermediate	
11	X046J6028Z					1	1	1	1			Compensator	
12	X046J0069Z					1	1	1	1			Cable - Handbrake - Rear	
13	X046J0016Z					1	1	1	1			Spring - Handbrake - Cable Return	
14	X046G6032Z					1		1		+	+	Pipe - Bundy - Reservoir to Master Cylinder	
15	X050J6052Z					1		1		+	+	Pipe - Bundy - Master Cylinder to Two Way Union	
16	A050J6085Z					1		1		+	+	Union - two Way	
17	A074J6010Z					1		1		+	+	Pipe - Bundy - Two Way Union to Servo Unit	
18	X026J6019Z					1		1		+	+	Pipe - Bundy - Servo Unit to Five Way Union	

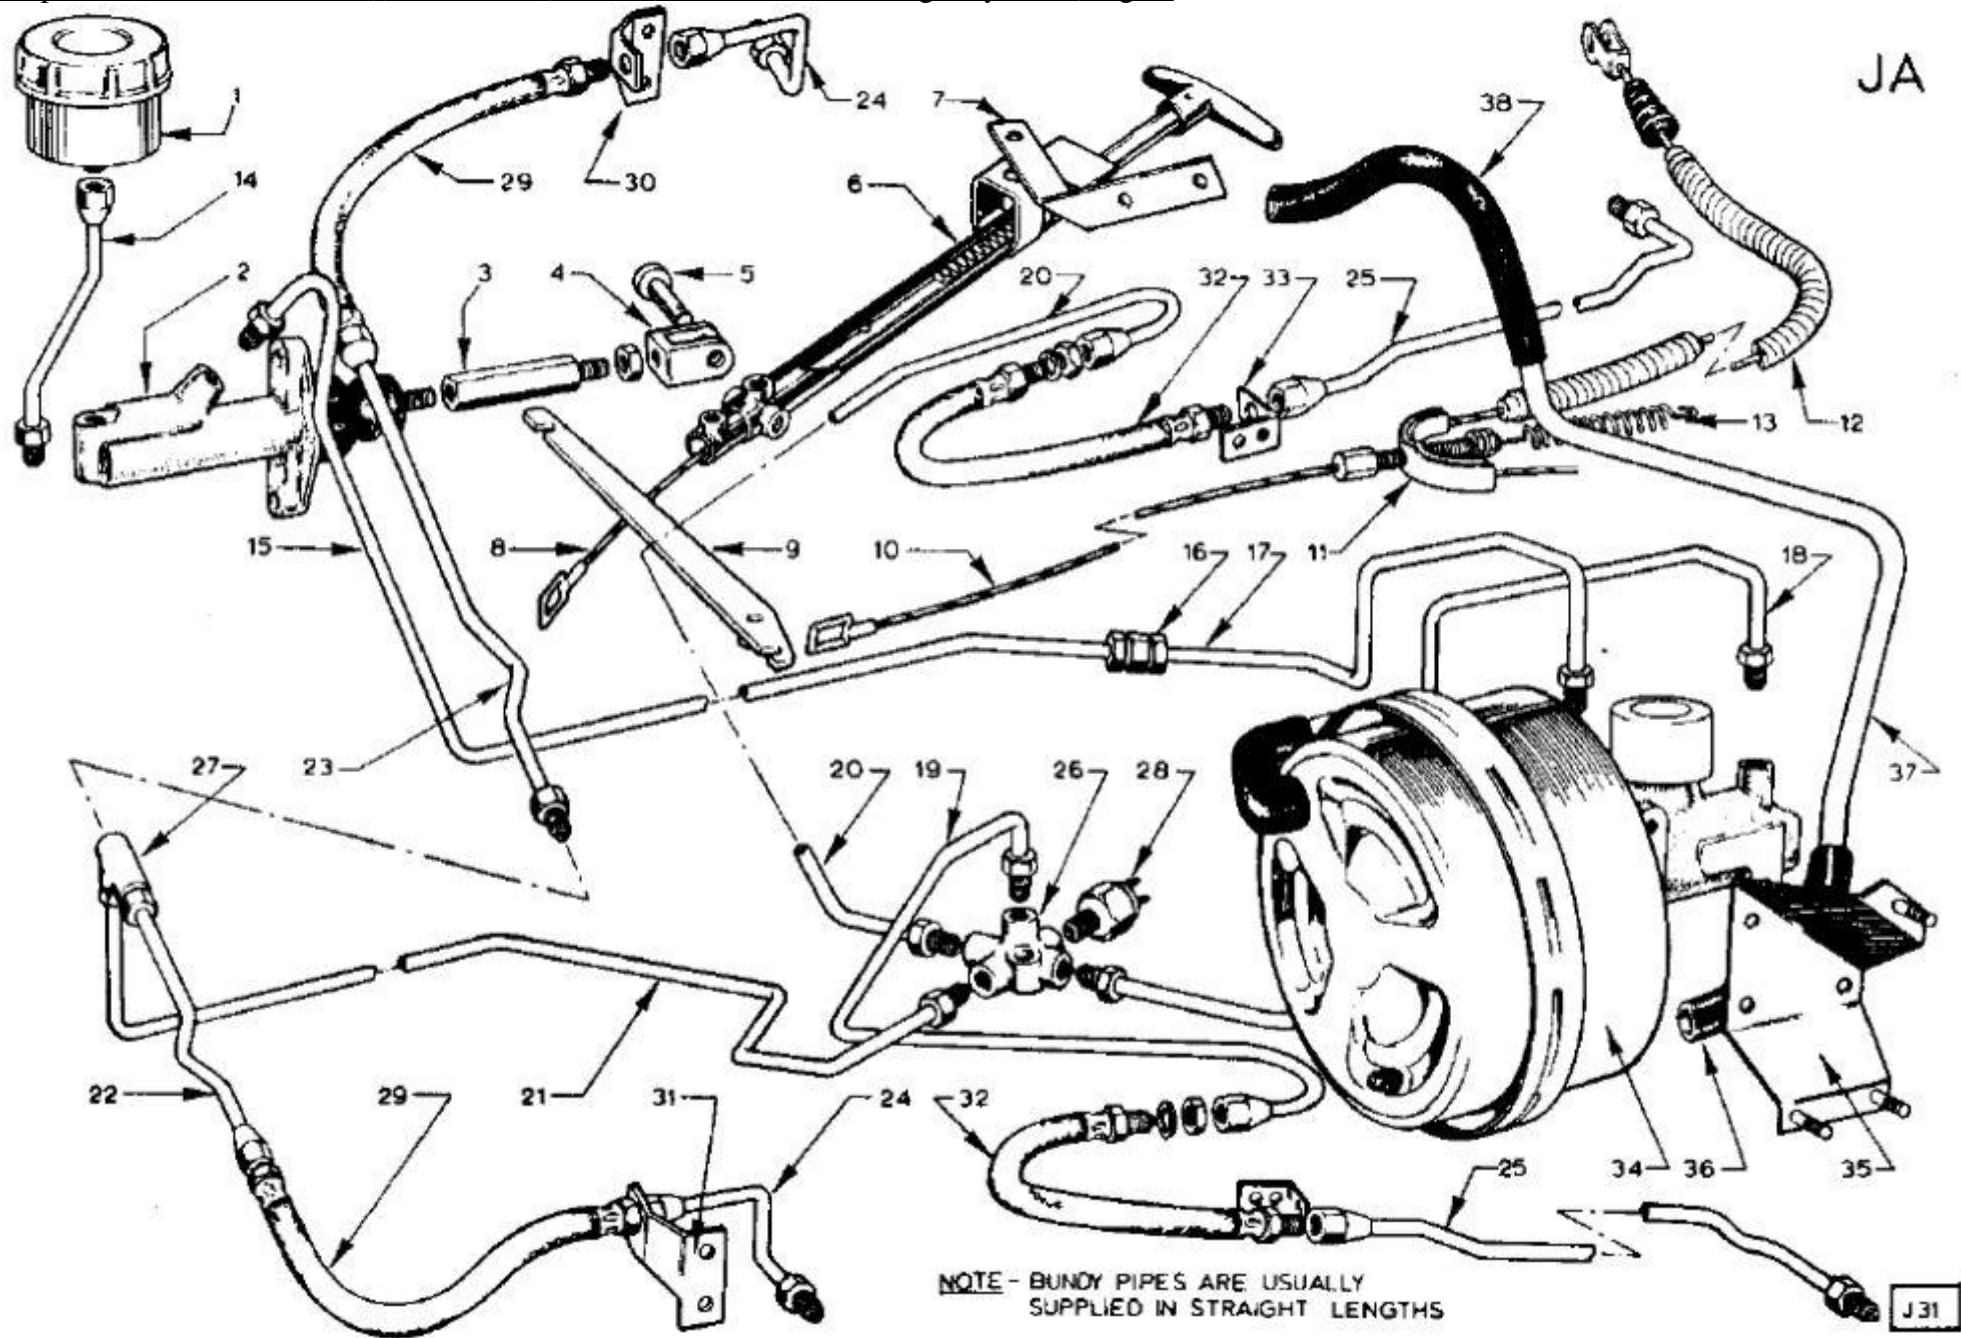

Lotus Europa TC/TCS Parts Manual - Section JA - Brakes - Handbrake and Single System - Page 4

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
19	X046J6045Z					1		1		+	+	Pipe - Bundy - Five Way Union to L/H rear Hose	
20	Z036J6093Z					1		1		+	+	Pipe - Bundy - Five Way Union to R/H Rear Hose	
21	A054J6006Z					1		1		+	+	Pipe - Bundy - Five Way Union to three Way Union	
22	A036J6089Z					1		1		+	+	Pipe - Bundy - Three Way Union to L/H Front Hose	
23	A074J6007Z					1		1		+	+	Pipe - Bundy - Three Way Union to R/H front Hose	
24	X046J6044Z					2		2		+	+	Pipe - Bundy - Hose to Caliper	
25	A074J6032Z					2		2		+	+	Pipe - Bundy - Hose to Rear Brake	
26	X036J6015Z					1		1		+	+	Union - Five Way	
26	A050B1938Z					1		1		+	+	Spacer - Five Way Union to Chassis	
27	X036J6016Z					1		1		+	+	Union - Three Way	
28	X046J6025Z					1		1		+	+	Stop Lamp Switch	
28	X036J6059					1		1		+	+	Seal - Stop Lamp Switch	
29	X046J6016Z					2		2		+	+	Hose - Flexible - Front	
29	Z16					2		2		+	+	Nut - Securing - Hose - Flexible - Front	
30	X046J2001Z					1		1		+	+	Bracket - Hose Securing - R/H	
31	X046J2000Z					1		1		+	+	Bracket - Hose Securing - L/H	
32	X046J6020Z					2		2		+	+	Hose - Flexible - Rear	
32	Z16					2		2		+	+	Nut - Securing - Hose - Flexible - Rear	
33	X046J2002Z					2		2		+	+	Bracket - Hose Securing	
34	X054J6023W					1		1		+	+	Unit - Brake Servo	
35	D036J0162Z					1		1		+	+	Bracket - Servo Unit Mounting	
35	C036J0089Z					1		1		+	+	Plate - Backing	
36	A074J6005Z					1		1		+	+	Hose - Vacuum	
36	A074J6019Z					1		1		+	+	Hose - Vacuum	
37	A074J6009Z					1		1		+	+	Pipe - Bundy - Vacuum	
38	X050J6078Z					1		1		+	+	Hose - Vacuum	