


Lotus Europa TC/TCS Parts Manual - Section JB - Brakes - Dual System - Page 2

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
1	A074J6033W					1	1	1	1		+	Cylinder - Master - c/w Reservoir	
1	A074J6051W										+	Kit - Reservoir Servicing (As Required)	
1	A074J6052Z					1	1	1	1		+	Cap - Filler	
1	A074J6050W					1	1	1	1		+	Kit - Master Cylinder Servicing	
2	C074J0204Z					1	1	1	1		+	Spacer - Master Cylinder	
3	A074J0206Z					1	1	1	1		+	Adaptor - Push rod	
4	X036J6085Z					2	2	2	2		+	Unit - Brake Servo - Front and Rear	
5	D036J0162Z					2	2	2	2		+	Bracket - Servo Mounting	
6	A074J0209Z					3	3	3	3		+	Spacer - Servo Mounting Bracket - Rear	
7	X050J6053W					1	1	1	1		+	Valve - Pressure Difference Warning (PDWV)	
8	X046J6017Z					1	1	1	1		+	Union - 4 Way	Attaches with 7/16 head, 1/4" x 28 TPI, 1" long bolt, & 1/4" x 28 TPI Nyloc nut
8	X046J1938Z					1	1	1	1		+	Spacer - Union to Chassis	
9	A050J6085Z					3	3	3	3		+	Union - 2 Way	
10	X036J6016Z					1	1	1	1		+	Union - 3 Way	
11	X046J6025Z					1	1	1	1		+	Stop Lamp Switch	
11	X036J6059Z					1	1	1	1		+	Seal - Stop Lamp Switch	
12	A074J6025Z					1	1	1	1		+	Pipe - Bundy - Master Cylinder to 2 Way Union (Rear Servo System)	
13	A074J6026Z					1	1	1	1		+	Pipe - Bundy - 2 Way Union to PDWV (Rear Servo System)	
14	A074J6027Z					1	1	1	1		+	Pipe - Bundy - PDWV to Rear Unit	
15	A074J6016Z					1	1	1	1		+	Pipe - Bundy - Master cylinder to 2 Way Union (Front Servo System)	
16	A074K6017Z					1	1	1	1		+	Pipe - Bundy - 2 Way Union to PDWV	
17	A074J6018Z					1	1	1	1		+	Pipe - Bundy - PDWV to Front Servo Unit	
18	A074J6034Z					1	1	1	1		+	Pipe - Bundy - Rear Servo Unit to 4 Way Unit	
19	A074J6030Z					1	1	1	1		+	Pipe - Bundy - 4 Way Union to L/H rear Flexible Hose	
20	A074J6031Z					1	1	1	1		+	Pipe - Bundy - 4 Way Union to R/H rear Flexible Hose	
21	X046J6020Z					2	2	2	2		+	Hose - Flexible - Rear	
22	A074J6032Z					2	2	2	2		+	Pipe - Bundy - Flexible Hose to Brake Drums	
23	A074J6035Z					1	1	1	1		+	Pipe - Bundy - Front Servo Unit to 2 Way Union	
24	A074J6025Z					1	1	1	1		+	Pipe - Bundy - 2 Way Union to 3 Way Union	

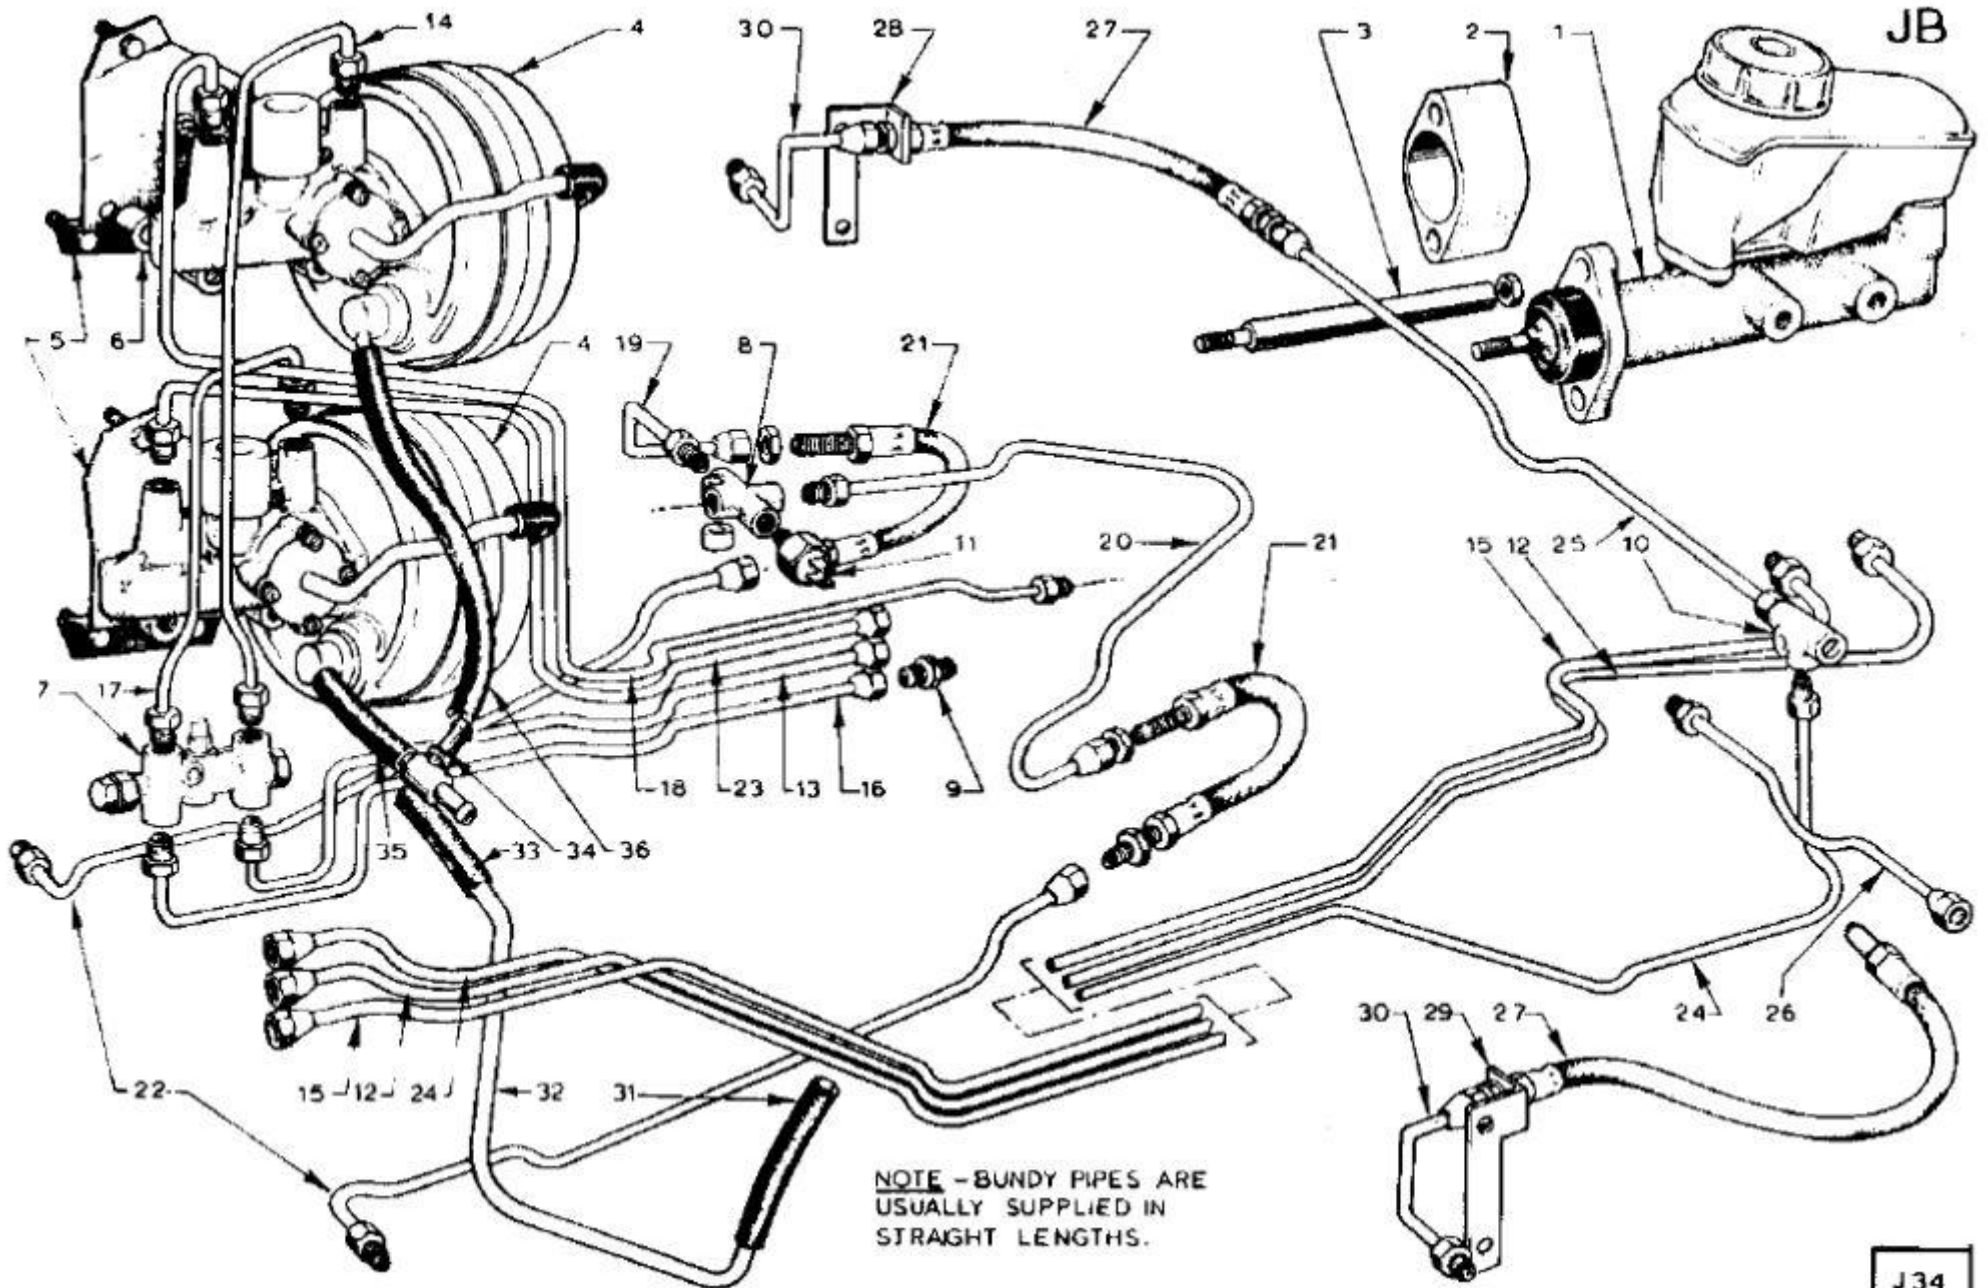

Lotus Europa TC/TCS Parts Manual - Section JB - Brakes - Dual System - Page 4

Item	Lotus #	S1	S1A/B	S2	S2 Fed	TC	TC Fed	TCS	TCS F	LHD	RHD	Description	Change Point Notes Bulletin Reference
25	A074J6023Z					1	1	1	1		+	Pipe - Bundy - 3 Way Union to L/H Front Flexible Hose	
26	A074J6024Z					1	1	1	1		+	Pipe - Bundy - 3 Way Union to R/H Front Flexible Hose	
27	X046J6016Z					2	2	2	2		+	Hose - Flexible - Front	
28	X046J2000Z					1	1	1	1		+	Bracket - Hose Securing - L/H	
29	X046J2001Z					1	1	1	1		+	Bracket - Hose Securing - R/H	
30	A074J6022Z					2	2	2	2		+	Pipe - Bundy - Flexible Hose to Front Caliper	
31	A074J6020Z					1	1	1	1		+	Hose - Vacuum - Vacuum Take Off to Bundy Pipe - Connecting	
32	A074J6021Z					1	1	1	1		+	Pipe - Bundy - Vacuum Take Off to T Piece	
33	A074J6019Z					1	1	1	1		+	Hose - Vacuum - Bundy Pipe to T Piece Connecting	
34	A074J6040Z					1	1	1	1		+	T Piece	
35	A074J6091Z					1	1	1	1		+	Hose - Vacuum - T Piece to Front Servo Unit	
36	A074J6020Z					1	1	1	1		+	Hose - Vacuum - T Piece to Rear Servo Unit	